


RECEPTION BIN

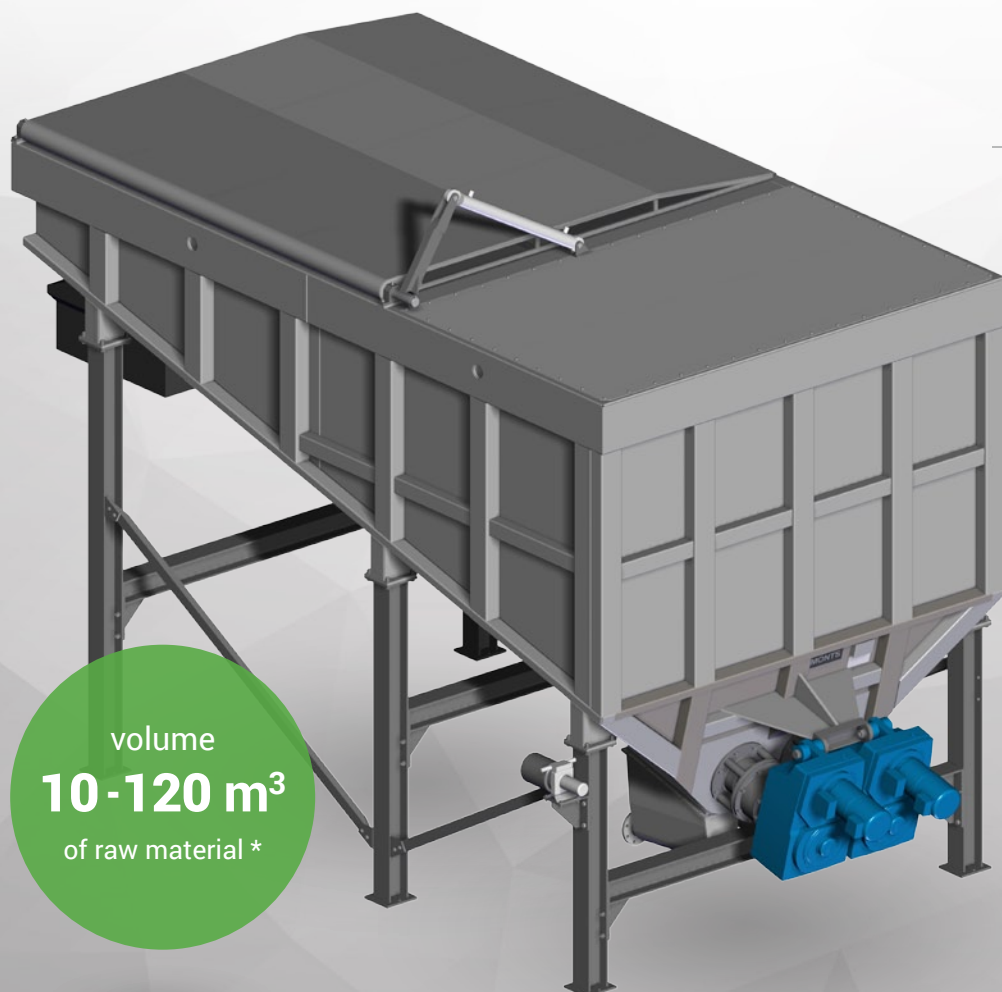

volume
10-120 m³
 of raw material *

available with
 automatic covers

different
 manufacturing
 materials

free standing
 or inbuilt
 to floor

with or without
 water screening



The reception bin ZPM is designed for: transportation, accumulation and short-term storage of animal by-products.

This bin is located at the beginning of a processing line and it is intended for slaughterhouse by-products or different supermarket and food by-products.

Size and dimension are always optimized to the type of raw material, volume and processing method.

suitable for various materials including feather

technological support in engineering of the proper bin type




The bin is placed at the beginning of the processing line. In the bin there are bottom screw conveyors, that transport the raw material to the outlet and that are driven by gearboxes with electric motors. The bins can be equipped with a water screening system and also with automatic remote covers.

Material: mild steel or stainless steel or their combination

Accessories: supporting construction zinc coated / motors with frequency inverters
screw conveyors / water screening / car wash

TECHNICAL SPECIFICATION

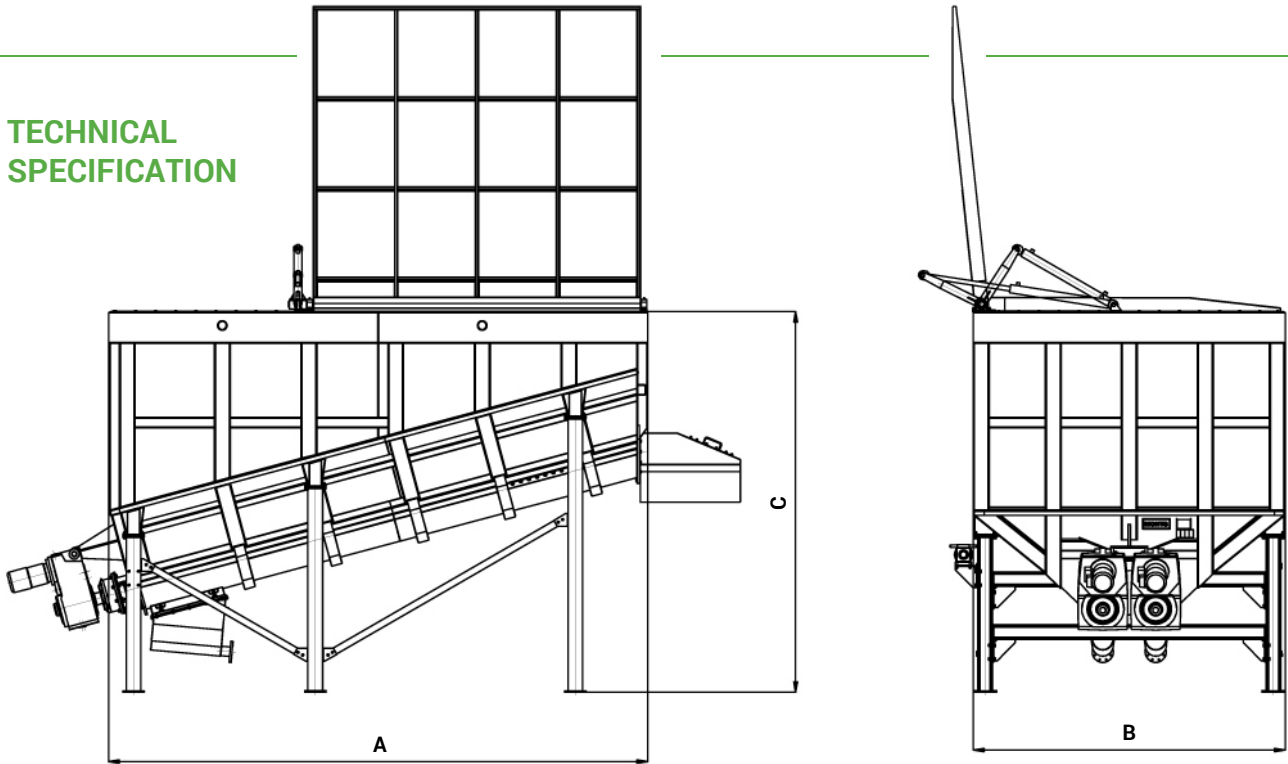

basic dimension range *

RECEPTION BIN		ZPM20	ZPM30	ZPM40	ZPM50	ZPM60
VOLUME	m ³	20	30	40	50	60
POWER	kW	2x3	2x3	2x4	3x5,5	3x7,5
NET WEIGHT	kg	6000	7700	11000	15600	18000
LENGTH /A	mm	4700	6400	8200	11300	12500
WIDTH /B	mm	3000	3000	3500	4000	4000
HEIGHT /C	mm	3800	3800	4000	4400	4500

* Performance and dimensions may vary according to application, raw material and consumer's wish.